


Witt Leveling Feet



To install; thread the leveling feet into the 3 holes provided at the base of the receptacle (*see diagram of base for location of leveling feet holes*). Adjust each individual leveling foot to the measurement needed to make receptacle level and provide maximum stability.

- Each unit comes with 3 zinc coated leveling feet
- Use when installing unit on unlevel ground (*not recommended for use on level ground*)
- Each leveling foot has 3/8" thread and are 1.25" long and the feet are 7/8" across

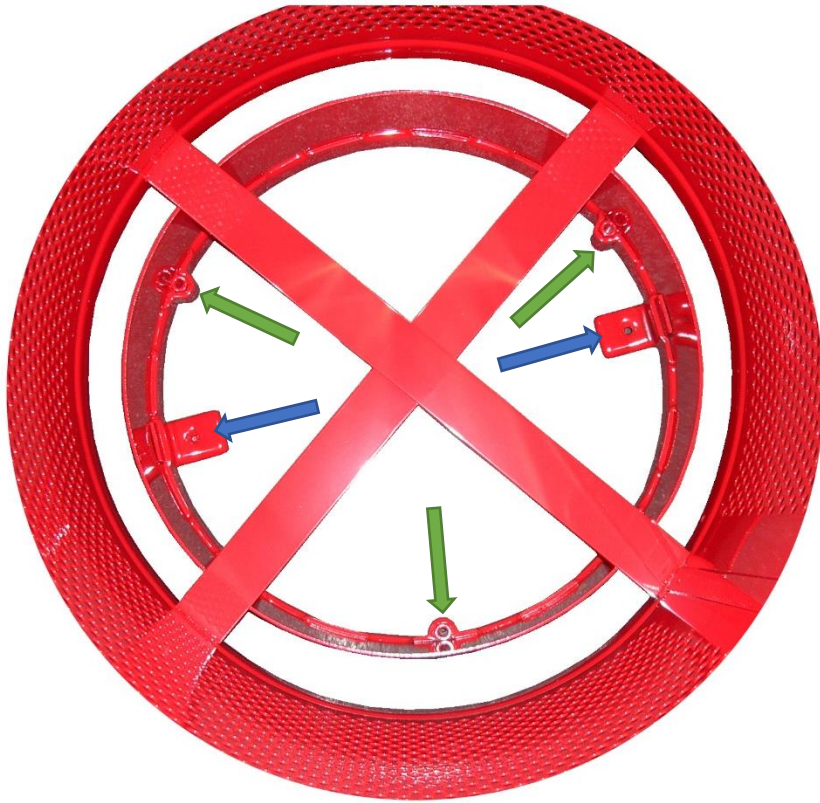

Green arrows represent Leveling feet holes

Blue arrows represent Anchor holes